

INDEX



A

- Accessories, 3–2
 - EA-4-COV2, 3–2
 - EA-6-COV2, 3–2
 - EA-MG-PGMSW, 3–2
 - EA-MG6-BZ2, 3–2, 3–7
 - EA-MG6-BZ2P, 3–2, 3–9, 3–10
 - USB-CBL-AB6, 3–2
- Agency Approvals, 1–5
- Available Models, 2–2

C

- C-more Micro-Graphic Panel Runtime Errors, B–2
 - Introduction, B–2
 - Panel Errors, B–2
- C-more Micro-Graphic Panel Runtime Errors, 8–9
- C-more Micro-Graphic Programming Software, 3–3
- Cables, 6–14
 - Cables from AutomationDirect, 6–14
 - Wiring Diagrams, 6–16, 6–17, 6–18, 6–19, 6–20, 6–21, 6–22, 6–23
 - User Constructed Cables, 6–24
 - Wiring Diagrams, 6–24, 6–25, 6–26, 6–27, 6–28, 6–29, 6–30, 6–31, 6–32
- Chemical Compatibility, 2–10
- Clear Screen Overlay, 3–13
 - Dimensions, 3–13
 - Installation, 3–13
- Communication Port Adapters, 3–12
 - EA-ADPTR-4, 3–12
 - EA-COMCON-3, 3–12
- Communications Ports, 2–9

EA1-T4CL, 2–9

EA1-T6CL, 2–9

Conventions Used, 1–3

exclamation mark, 1–3

notepad, 1–3

E

Enclosure Clearances, 1–12

Enclosure Thickness, 2–8

Error Code P499 Explanation, A–7

Allen-Bradley, A–8

DirectLOGIC, A–7

Do-more, A–6

GE, A–13

Modbus, A–4

AutomationDirect CLICK, A–4

AutomationDirect DirectLOGIC - Modbus (Koyo), A–4

Entivity Modbus RTU, A–4

Modicon Modbus RTU, A–4

Omron, A–25

Productivity3000, A–5

Siemens, A–30

F

Function Keys Insert Label, 9–3

Customizing, 9–3

I

Installation, 4–3

Introduction, 1–2

K

Keypad Bezel, 20-Button Landscape, 3–6

Assembly, 3–8

Cutout, 3–6

Dimensions, 3–6

Specifications, 3–7

- Keypad Bezel, 21-Button Portrait, 3–9
 - Assembly, 3–11
 - Cutout, 3–9
 - Specifications, 3–10

L

- Lost Firmware – Red ‘Update Mode’ Screen Displayed, 8–4

M

- Maintenance, 7–2
 - Check Operating Environment, 7–2
 - Check Operating Voltage, 7–2
 - Check Physical Conditions, 7–3
 - Check Project Functionality, 7–6
 - Check Settings under the System Setup Screens, 7–5
 - Check Transmit and Receive Indicators, 7–3
 - Checks from the C-more Micro-Graphic Programming Software, 7–6
 - Cleaning the Display Screen, 7–5
 - Project Backup, 7–2
 - Run Tests under the System Setup Screens, 7–4
- Mounting Clip Screw Torque, 2–8
- Mounting Clips, 4–3

P

- Panel & PLC Error Code Tables, A–2
 - Allen-Bradley DF1 Protocol, A–9, A–10
 - Allen-Bradley DH485 Protocol, A–11, A–12
 - C-more Micro-Graphic Panel, A–3, A–4
 - DirectLOGIC – DirectNET PLC, A–7
 - DirectLOGIC – K-Sequence PLC, A–7
 - GE SNPX Protocol, A–14, A–15, A–16, A–17, A–18, A–19, A–20, A–21, A–22
 - Introduction, A–2
 - Mitsubishi FX Protocol, A–23
 - Mitsubishi Q / QnA Series, A–23, A–24
 - Omron FINS Protocol, A–27, A–28, A–29
 - Omron Host Link Protocol, A–26
 - Siemens PPI Protocol, A–31

- Panel Cutout Dimensions (all models), 4–4
- Panel Dimensions, 2–7
 - EA1-T4CL, 2–7
 - EA1-T6CL, 2–8
- Panel Errors, 8–9
- Panel Objects, 3–4
 - Adjust Display Contrast, 3–5
 - Analog Meter, 3–4
 - Bar Meter, 3–4
 - Bitmap Button, 3–4
 - Circle, 3–4
 - Dynamic Bitmap, 3–5
 - Dynamic Text, 3–5
 - Frame, 3–4
 - Function, 3–5
 - Graphic Indicator Light, 3–4
 - Increment/Decrement Value, 3–4
 - Indicator Button, 3–4
 - Indicator Light, 3–4
 - Line, 3–4
 - Line Graph, 3–4
 - Lookup Text, 3–5
 - Multi-State Bitmap, 3–5
 - Numeric Display, 3–4
 - Numeric Entry, 3–4
 - Pushbutton, 3–4
 - Radio Button, 3–4
 - Real Time Graph, 3–4
 - Recipe, 3–5
 - Rectangle, 3–4
 - Screen Change Pushbutton, 3–5
 - Screen Selector, 3–5
 - Scroll Text, 3–5
 - Static Bitmap, 3–4
 - Static Text, 3–5
 - Switch, 3–4
 - Tri-State Switch, 3–4
- Part Number Key, 1–6

- Bezel Part Number Key, 1–6
- Panel Part Number Key, 1–6
- Password Protection - DirectLOGIC PLC's, 6–5
- PC Requirements, 3–3
- PLC Communications
 - Communication Ports, 6–4
 - EA1-T4CL, 6–4
 - EA1-T6CL, 6–4
 - Introduction, 6–2, 6–3
- PLC Compatibility and Connection Charts, 6–5
 - Allen-Bradley PLCs, 6–12
 - CLICK PLC, 6–7
 - DirectLOGIC DL05, DL06, D0-DCM Module & DL105 PLCs, 6–8
 - DirectLOGIC DL205 PLCs, D2-DCM Module and WINPLC, 6–9
 - DirectLOGIC DL305 PLCs and D3-DCM Module, 6–10
 - DirectLOGIC DL405 PLCs and D4-DCM Module, 6–11
 - Do-more, 6–7
 - GE, Mitsubishi, Omron, Modicon and Siemens PLCs, 6–13
 - GS Drives, 6–7
 - Instructions for using, 6–6
 - ProductivitySeries, 6–7
 - SOLO Temperature Controller, 6–7
- Product Label Example, 1–6
- Product Overview, 1–4
 - EA1-T4CL, 1–4
 - EA1-T6CL, 1–5

Q

- Quick Start Steps, 1–7
 - Step 1 – Unpack and Inspect, 1–7
 - Step 10 – Connect C-more 6” Micro-Graphic Panel to PLC, 1–18
 - Step 2 – Install Optional Hardware Accessories, 1–8
 - Step 3 – Become Familiar with Available Communication Ports, 1–9
 - Step 4 – Install C-more Micro-Graphic Panel, 1–10
 - Step 5 – Install the Programming Software and Develop a Project, 1–13
 - Step 6 – Connect C-more 6” Micro-Graphic Panel to Computer, 1–14
 - Step 7 – Providing Power to the C-more 6” Micro-Graphic Panel, 1–15

Step 8 – Accessing the C-more 6” Micro-Graphic Panel Setup Screens, 1–16

Step 9 – Choose C-more 6” Micro-Graphic Panel to PLC Protocol & Cables, 1–17

R

Replacement Parts

4” Function Keys Label Inserts EA-MG4-FKL, 9–2

6” Function Keys Label Inserts EA-MG6-S6ML-FKL, 9–2

Clear Screen Overlay EA-6-COV2, 9–2

DC Power Connector Part No. EA-MG-DC-CON, 9–2

Keypad Bezel 1 Gasket Part No. EA-MG-BZ1-GSK, 9–2

Keypad Bezel 2 Mounting Clips Part No. EA-MG-BZ2-BRK, 9–2

Panel Gasket Part No. EA-MG-S3ML-GSK, 9–2

Replacement Parts at a Glance, 9–2

Replacement Parts Overview, 9–2

RS-422A/RS-485A Multi-Drop Wiring Diagram Examples, 6–34, 6–35, 6–36, 6–37

S

Safety Guidelines, 4–2

Serial Number and Date Code format, 1–6

Setting Menu, 5–7

Brightness, 5–7

Calibration, 5–9

Clear User Memory, 5–10

Hourglass, 5–11

Reset to Factory Default, 5–10

Rotation, 5–12

Touch/Key Beep, 5–8

Setup Menu, 5–5

Information Menu, 5–6

Extensions, 5–6

Memory, 5–6

Protocol, 5–6

Versions, 5–6

Specifications, 2–3

EA1-T4CL, 2–3

EA1-T6CL, 2–5

System Setup Screens, 5–2

Accessing, 5–3
Exit, 5–17
Flowchart, 5–4
Information, 5–2
Introduction, 5–2
Setting, 5–2
Test Menu, 5–2

T

Technical Support, 1–2
Test Menu, 5–13
 Buzzer Test, 5–15
 Display Test, 5–16
 PLC Enquiry Test, 5–15
 Serial Port2 - Loop Back Test, 5–14
 Touch Panel Test, 5–16
Troubleshooting, 8–2
 C-more Micro-Graphic Panel does not Power up, 8–2
 Powered from 12-24 VDC, 8–2
 Powered from 5 VDC, 8–2
 Display is Blank, 8–2
 Display is Dim, 8–3
 Electrical Noise Problems, 8–10
 No Communications between Panel and PC, 8–5
 No Communications between Panel and PLC, 8–7
 No User Program, 8–3
 Panel & PLC Error Codes, 8–8
 Panel Communications Error Code Example, 8–8
 Reset to Factory Default, 8–10

U

Updating Firmware, 8–4
USB to RS-232 Programming Cable Assembly, 1–14

W

Wiring Guidelines, 4–5

