



WARNING/Caution inside cover
Table of Contents i
Manual Revisions iv
EU Information v

1 INTRODUCTION

Manual Organization 2
Introduction to the EZText Panel 4
What you need to get started 5
 Hardware 5
 Software 5
Need Help? 5
 Onscreen HELP 5
 PLC HELP 5
 Technical Support 6
Models 7
PLCs Supported by EZText Panels 8
PLC and Programming Cable Part Numbers 9
Accessories and Optional Equipment 9
Front Panel Features 10
 Operator Controls and Indicators 10
 PLC Message LED 10
 Control Pushbuttons 11
 Function Pushbuttons 11
 Pushbutton LED 11
 Annunciator Lamps 11
 Data Entry (Keypad) Pushbuttons 12
 Character LCD Display with LED Backlight 12
 Messages 12
Rear Panel Indicators 13
Specifications 14

2 HARDWARE INSTALLATION

Custom Labels 16
 Create Custom Labels 16
 Install Custom Labels 17
EMI Noise Filter Installation 18
Mounting 19
 STUD Mounting 19
 Model EZ-220P/EZ-220P-DEV Outline Dimensions 19
 Model EZ-220P/EZ-220P-DEV Cutout Dimensions
 (Mounting Template) 20
 DIN CLIP Mounting 21
Connections and Wiring 22
 Rear View 23
 Power Connector 24



Serial Port	24
Connect a Programming PC	24
Connect a PLC	25
DeviceNet Port	25
3 LEARNING THE FEATURES	
Learning the Features	28
Memory Mapping/PLC Data Registers	28
Pushbuttons	29
LEDs	29
Annunciator Lamps	30
PLC Message Registers	31
Embedded Data Registers	31
PLC Messages and Local Messages	32
Embedded Data	32
Message Types	33
Displaying PLC Messages	34
Arrow Adjustment Entry	35
Numeric Keypad Entry	35
Annunciator Lamps	35
PLC Message LED	35
Displaying Local Messages	36
Local Message File Structure Example	37
Local Message Menu Structure Example	38
4 TUTORIAL	
EZText Panel Setup	40
SETUP Mode	40
Adjust Display Contrast	40
Internal Software and Hardware Revisions	40
Preparing for Configuration	40
Installing EZText Programming Software	41
Tutorial — Plan the Project using Application Worksheets	43
Tutorial — Create the Project using EZText Programming Software	48
Tutorial — Configure a PLC	57
5 CONFIGURATION	
Configure New System	62
Configure Existing System	78
Connect to Panel, View Panel Status and Firmware Version	79
Upgrade Firmware	80
6 MAINTENANCE and TROUBLESHOOTING	
Maintenance	84



Fuse Reset 84
Precautions 84
Screen Overlay/Chemical Compatibility 84
Screen Overlay Cleaning 86
Gasket Replacement 86
Troubleshooting 87
 Panel Configuration Problems 87
 PLC Errors 87
Still Need Help? 89
Warranty Repairs 90
Out of Warranty Repairs 90
Frequently Asked Questions (FAQs) 91

Appendix A
 EZText Panel Application Worksheet A-2

Appendix B
 Cable/Wiring Diagrams B-2

Appendix C
 PLC Driver Error Messages C-2
 EZText Panel Error Messages C-13
 EZText Programming Software Error Messages C-14

INDEX I-1