


DURAPULSE GS20 & GS20X DRIVE USER MANUAL TABLE OF CONTENTS

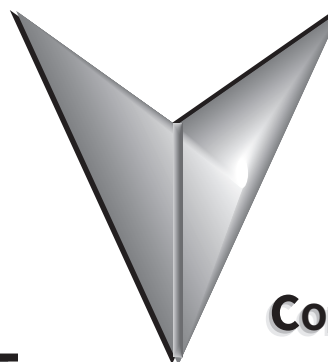

CONTENTS

GS20 USER MANUAL TOC

WARNINGS AND TRADEMARKS	W-1
~ WARNING ~	W-1
Trademarks.	W-1
~ AVERTISSEMENT ~	W-2
Marques de commerce	W-2
Warnings	W-3
DURAPULSE GS20 & GS20X USER MANUAL REVISION HISTORY.	H-1
DURAPULSE GS20 & GS20X DRIVE USER MANUAL TABLE OF CONTENTS	TOC-1
CHAPTER 1: GETTING STARTED.	1-9
User Manual Overview	1-10
Overview of this Publication	1-10
Who Should Read This Manual.	1-10
Supplemental Publications	1-10
Technical Support	1-10
Produced By	1-10
Special Symbols	1-10
Purpose of AC Drives	1-11
Selecting the Proper Drive Rating	1-11
Determine Motor Full-Load Amperage (FLA)	1-11
Determine Motor Overload Requirements	1-11
Determine Application Type; Constant Torque or Variable Torque	1-11
Installation Altitude	1-12
Determine Maximum Enclosure Internal Temperature	1-13
Derate Output Current Based on Carrier Frequency (if necessary)	1-15
GS20(X) Variable Torque Carrier Frequency Derating.	1-15
DURAPULSE GS20 & GS20X AC Drive Environmental Information	1-17
Storage and Transportation.	1-17
GS20 Environmental Conditions	1-17
GS20X Environmental Conditions	1-17
GS20 & GS20X General Specifications.	1-18
DURAPULSE GS20 AC Drive Specifications	1-19
120V Class – 1-Phase Model-Specific Specifications	1-19
230V Class – 1-Phase Model-Specific Specifications	1-20
230V Class – 3-Phase Model-Specific Specifications	1-21
230V Class – 3-Phase Model-Specific Specifications	1-22
460V Class – 3-Phase Model-Specific Specifications	1-23
460V Class – 3-Phase Model-Specific Specifications	1-24
575V Class – 3-Phase Model-Specific Specifications	1-25

DURAPULSE GS20X AC Drive Specifications	1-26
230V Class – 1-Phase Model-Specific Specifications	1-26
230V Class – 3-Phase Model-Specific Specifications	1-27
460V Class – 3-Phase Model-Specific Specifications	1-28
Receiving and Inspection	1-29
Drive Package Contents	1-29
Model Number Explanation	1-30
Nameplate Information	1-30
CHAPTER 2: INSTALLATION AND WIRING	2-1
Drive Models by Frame Size	2-2
Installation	2-2
Minimum Clearances and Air Flow	2-3
GS20 Series Minimum Clearance Distances	2-3
GS20 Airflow and Power Dissipation	2-4
GS20X Series Minimum Clearance Distances	2-5
GS20X Airflow and Power Dissipation	2-5
Dimensions	2-6
Circuit Connections – RFI Jumper	2-16
RFI Jumper Removal	2-16
Isolating Main Power from Ground	2-17
Floating Ground System (IT Systems)	2-18
Asymmetric Ground System (Corner Grounded TN Systems)	2-18
Circuit Connections – Warnings and Notes	2-19
Danger!	2-19
Wiring Terminal Access	2-23
Control Terminal Access	2-23
Main Circuit Wiring Terminals	2-24
Main Terminal Specifications	2-24
Wiring Terminal Connector Dimensions – Main-Circuit Terminals	2-26
Main Terminal Diagrams	2-28
Main Circuit Wiring Diagrams	2-31
Control Circuit Wiring Terminals	2-31
GS20 & GS20X Control Terminal Specifications	2-31
GS20 & GS20X Control Terminal Block Diagram & Wiring Specifications	2-34
Control Terminal Wiring Instructions	2-35
Control Circuit Wiring Diagrams	2-36
Digital Inputs	2-36
System Wiring Diagram	2-37
Full I/O Wiring Diagram	2-38
CHAPTER 3: KEYPAD OPERATION AND QUICKSTART	3-1
The DURApulse GS20 & GS20X Digital Keypad	3-2
Keypad Indicator LEDs	3-3
GS20(X) Keypad Operation	3-4
GS20(X) Keypad Function Examples	3-4
Main Page	3-5
Frequency Command Settings	3-5
Parameter Settings	3-6
PLC Settings	3-6

Setting Direction	3–7
Application Settings	3–7
Reference Table for Digital LED Character Display	3–9
CHAPTER 4: AC DRIVE PARAMETERS	4–1
Introduction	4–3
Video Tutorials	4–3
DURAPULSE GS20(X) Parameter Summary	4–3
Drive Parameters Summary (P00.xx)	4–3
Basic Parameters Summary (P01.xx)	4–10
Digital Input/Output Parameters Summary (P02.xx)	4–14
Analog Input/Output Parameters Summary (P03.xx)	4–20
Multi-Step Speed Parameters Summary (P04.xx)	4–23
Motor Parameters Summary (P05.xx)	4–24
Protection Parameters Summary (P06.xx)	4–27
Special Parameters Summary (P07.xx)	4–34
High-Function PID Parameters Summary (P08.xx)	4–37
Communication Parameters Summary (P09.xx)	4–39
Speed Feedback Control Parameters Summary (P10.xx)	4–42
Advanced Parameters Summary (P11.xx)	4–44
Macro / User Defined Macro Parameters Summary (P13.xx)	4–46
Protection Parameters (2) Summary (P14.xx)	4–48
DURAPULSE GS20(X) Parameter Details	4–50
Explanation of Parameter Details format	4–50
Group P00.xx Details – Drive Parameters	4–51
Group P01.xx Details – Basic Parameters	4–72
Group P02.xx Details – Digital Input/Output Parameters	4–83
Group P03.xx Details – Analog Input/Output Parameters	4–104
Analog Input Parameter Examples	4–116
Group P04.xx Details – Multi-Step Speed Parameters	4–139
Group P05.xx Details – Motor Parameters	4–141
Group P06.xx Details – Protection Parameters	4–150
Group P07.xx Details – Special Parameters	4–175
Group P08.xx Details – High-function PID Parameters	4–188
Group P09.xx Details – Communication Parameters	4–203
Group P10.xx Details – Speed Feedback Control Parameters	4–220
Group P11.xx Details – Advanced Parameters	4–229
Group P13.xx Details – Macro / User Defined Parameters	4–238
Group P14.xx Details – Protection Parameters (2)	4–251
Adjustments and Applications	4–257
FOC sensorless vector mode with standard induction motor (IM) adjustment procedure	4–257
TQC sensorless vector mode standard induction motor (IM) adjustment procedure	4–261
PMSVC mode with permanent magnet motor (PM) adjustment procedure	4–263
Torque Calculation and Torque Parameter Setup Reference	4–267
Drive Motor Torque Calculation	4–267
GS20 Drive - Torque Limit in Speed Mode Detailed Explanation	4–268
Speed Mode with Torque Limits via Analog Input	4–269
GS20 Drive Quick Reference- Alternating between Torque and Speed Mode	4–270
CHAPTER 5: SERIAL COMMUNICATIONS	5–1
Communications Parameters Summary	5–2

<i>Summary – Serial Communication Parameters</i>	5-2
<i>Serial Modbus Status Addresses</i>	5-6
<i>Status Addresses (Read Only)</i>	5-6
<i>Serial Communications Overview</i>	5-9
<i>Serial Communications Connectivity</i>	5-9
<i>Minimum AC Drive Parameter Settings For Serial Communication</i>	5-9
<i>Common Third-Party Modbus RTU Masters</i>	5-10
<i>AutomationDirect PLCs as Modbus Master</i>	5-10
<i>Connecting Communication Cables</i>	5-11
<i>Detailed Serial Modbus Communication Information</i>	5-13
<i>Data Format</i>	5-13
<i>Communication Protocol</i>	5-14
<i>CMD (command code) and DATA (data characters)</i>	5-15
CHAPTER 6: MAINTENANCE AND TROUBLESHOOTING	6-1
<i>Maintenance and Inspections</i>	6-2
<i>Monthly Inspection</i>	6-2
<i>Annual Inspection</i>	6-2
<i>Recharge Capacitors (for drives not in service)</i>	6-3
<i>Recommended Inspection Schedules</i>	6-4
<i>Troubleshooting</i>	6-8
<i>Warning Codes</i>	6-8
<i>Fault Codes</i>	6-25
<i>Typical AC Drive Problems and Solutions</i>	6-51
<i>Grease and Dirt Problems</i>	6-51
<i>Fiber Dust Problem</i>	6-52
<i>Corrosion Problem</i>	6-53
<i>Industrial Dust Problem</i>	6-54
<i>Wiring and Installation Problem</i>	6-55
<i>Digital Input/Output Terminal Problems</i>	6-56
CHAPTER 7: GSOFT2 – GETTING STARTED	7-1
<i>GS20(X) Drive Configuration Software</i>	7-2
<i>System Requirements</i>	7-2
<i>Installation Guide</i>	7-3
<i>System Requirement Configuration</i>	7-3
<i>Software Installation</i>	7-4
<i>Opening GSoft2 Software Program</i>	7-6
<i>Software Functions</i>	7-7
<i>Firmware Upgrade Notes</i>	7-10
<i>GSoft2 Help File Note</i>	7-10
CHAPTER 8: GSLOGIC INTRODUCTION	8-1
<i>Purpose of This Chapter</i>	8-2
<i>For More Detailed Information</i>	8-2
<i>GSLogic Introduction</i>	8-2
<i>GS20(X) PLC Summary</i>	8-3
<i>Introduction</i>	8-3
<i>Notes on Using GSLogic, the GS20(X) PLC, and the GS20(X) Drive</i>	8-4
<i>Getting Started</i>	8-7
<i>Connect to PLC</i>	8-7

Controlling Drive IO with the PLC	8–9
Installation of GSLogic Programming Software.	8–11
System Requirements	8–11
About Getting Started.	8–11
Software and Online Help Files.	8–11
Technical Support	8–11
Installing GSLogic Programming Software	8–12
Program Writing.	8–14
Connecting GSLogic PC to GS20(X) PLC	8–14
Basic Ladder Program Example.	8–19
Program Download	8–21
Program Monitoring.	8–22
GS20(X) GSLogic Program Examples.	8–23
APPENDIX A: ACCESSORIES.	A–1
Fuses/Circuit Breakers.	A–2
Recommended Fuse Specifications for the DC-side of Common DC-Bus	A–4
Standard Footprint EMC Filter and Zero Phase Reactor	A–5
Filter Dimensions	A–7
High Performance EMI Input Filters	A–8
EMI Filter Installation	A–9
Recommended Motor Cable Length.	A–10
Line Reactors / Voltage Time Filters	A–11
Line/Load Reactors Selection Charts.	A–13
Line Reactor Applications and Wiring Connections.	A–14
Recommended Cable Length.	A–16
Dynamic Braking	A–18
Braking Units.	A–18
Choosing and Installing a Braking Resistor	A–19
EMC Shield & Earthing Plates	A–20
GS20 EMC Shield Plates.	A–20
GS20X Earthing Plates.	A–24
Capacitive Filter (GS20A-CAPF).	A–27
Conduit Box	A–29
Conduit Box Installation.	A–31
Disconnect Switch.	A–33
Disconnect Switch Compatibility.	A–33
DSC Series Dimensions	A–33
Installing the Disconnect Switch	A–34
Replacement Fan Kit	A–37
Remote Keypad Mounting	A–40
DIN Rail Mounting	A–41
GS20 DIN Rail Installation.	A–42
Mounting Adapter Plate	A–43
Mounting Adapter Plate Dimensions	A–44
Mounting Adapter Plate Installation.	A–46
Optional Advanced Keypad.	A–48
GS20(X) Display Screens for GS4-KPD	A–51
Keypad Fault Codes	A–59
Keypad Panel Mounting Kit GS4-BZL	A–60

APPENDIX B: OPTIONAL I/O AND COMMUNICATION CARDS B-1

Introduction B-2

 Option Card Installation. B-2

 Removing the Card Slot Cover B-2

 Option Card Wiring B-3

GS20A-BPS. B-8

GS20A-CM-ENETIP B-9

 Connecting Comm Card to PC B-10

 GS20A-CM-ENETIP LED Indicators and Troubleshooting. B-11

 GS20A-CM-ENETIP IP Address and Network Configuration B-13

 GS20A-CM-ENETIP Common Parameters B-14

 Modbus TCP or EtherNet/IP Protocol Selection. B-15

Modbus TCP Protocol Configuration B-16

 GS20A-CM-ENETIP Control Words - Modbus Addressing. B-16

 GS20A-CM-ENETIP Status Words - Modbus Addressing. B-17

EtherNet/IP Protocol B-20

 GS20A-CM-ENETIP EtherNet/IP I/O Messaging (Implicit Messaging). B-20

 GS20(X)-CM-ENETIP Explicit Messaging. B-26

 GS20A-CM-ENETIP EtherNet/IP Basic Registers. B-30

 GS20A-CM-ENETIP EtherNet/IP Alarm Register. B-31

 EtherNet/IP Communication Card Register Settings B-32

 Using Speed Mode as a Control Method B-32

APPENDIX C: DIGITAL AND ANALOG I/O PARAMETER MAPS C-1

Introduction C-2

GS20(X) Digital Inputs. C-3

GS20(X) Digital Outputs C-4

GS20(X) Analog Common Parameters. C-5

GS20(X) Analog Input 1 Parameters C-5

GS20(X) Analog Input 2 Parameters C-6

GS20(X) Analog Output 1 Parameters C-8

GS20(X) Frequency Output Parameters C-8

APPENDIX D: USING GS20(X) AC DRIVES WITH AUTOMATIONDIRECT PLCs. D-1

Appendix D Overview. D-2

 Sinking/Sourcing Basics. D-2

GS20(X)-to-PLC I/O Wiring Examples D-4

 Drive Wired with DC Sinking Inputs (PLC output card is sourcing) D-4

 Drive Wired with DC Sourcing Inputs (PLC output card is sinking) D-4

 Drive Wired with DC Sinking Outputs (PLC input card is sourcing) D-5

 Drive Wired with DC Sourcing Outputs (PLC input card is sinking) D-5

 Drive Relay Outputs Wired with Sinking PLC Modules D-6

 Drive Relay Outputs Wired with Sourcing PLC Modules D-6

 Drive Analog Inputs D-7

 Analog Input Wired for Voltage and Current D-7

 Drive Analog Outputs D-8

 Analog Output Wired for Voltage and Current D-8

 Drive Frequency Output (High-speed pulse output) D-9

Communication with GS20(X) Drives D-10

 Getting Started. D-10

 Serial Modbus Monitoring and Control D-12

Ethernet/IP and Modbus TCP Monitor and Control	D-17
GS20A-CM-ENETIP EtherNet/IP I/O Messaging (Implicit Messaging).	D-18
Program Examples Using AutomationDirect PLCs	D-19
Modbus RTU CLICK Program Example.	D-19
EtherNet/IP Productivity PLC Example.	D-26
APPENDIX E: SAFE TORQUE OFF FUNCTION	E-1
Introduction	E-2
Safe Function Failure Rate	E-2
Safe Torque Off Terminal Function Description	E-2
Internal STO Circuit Wiring Diagrams	E-3
Control Loop Wiring.	E-4
STO Parameters	E-5
Timing Diagram Description	E-6
Error Code and Troubleshooting Instructions.	E-9
Test and Fault Confirmation.	E-11
APPENDIX F: PID CONTROL	F-1
Function of PID Control.	F-2
What Does PID Control Accomplish?	F-2
PID Control Analogy.	F-2
Common Applications for PID Control	F-3
Definition of PID Loop "Directions"	F-3
Forward-Acting PID Loop (Heating Loop) (Negative-Feedback Loop)	F-3
Reverse-Acting PID Loop (Cooling Loop) (Positive-Feedback Loop)	F-3
PID Control Overview	F-4
Concept of GS20(X) PID Control & Tuning	F-5
Proportional Gain (P)	F-5
Integral Time (I)	F-5
Derivative Value (D)	F-6
Proportional Integral Control (PI)	F-6
Proportional Derivative Control (PD).	F-6
Proportional Integral Derivative Control (PID)	F-6
Tuning Example for PID Control	F-7
DURApulse GS20/GS20-GS2mode Parameters Involved in PID Control	F-9
APPENDIX G: GS2 TO GS20 CONVERSION	G-1
Replacement of GS2 Drives with GS20	G-2
Step 1: Choosing a Compatible GS20 Model	G-3
Step 2: Reviewing the Mounting Dimension Differences.	G-4
Step 3: Reviewing the Fusing Guidelines.	G-6
Step 4: Reviewing the Main Power Wiring Specifications	G-7
Step 5: Reviewing the Control Wiring Specifications	G-9
Step 6: Review GS2 Accessories	G-12
Step 7: Converting Parameter Structure and GS2 Mode (Optional)	G-13
Step 8: Converting Your GS2 GSoft Parameter File to a GS20 GSoft2 File.	G-30

