



TABLE OF CONTENTS

Chapter 1: Hardware

Introduction	1-3
The Purpose of This User's Manual	1-3
Technical Support.....	1-3
Conventions Used	1-3
Product Overview StrideLinX Industrial VPN Router	1-4
Product Family	1-4
What's in the Box?	1-4
Hardware Overview.....	1-5
Specifications	1-6
Dimensions	1-8
Compatible Accessories.....	1-8
Installation	1-9
Installation and Removal Procedures	1-9
Wiring.....	1-10
Operation	1-12
LED Status Indicators.....	1-12
Reset to Factory Default	1-13
SIM Card Registration	1-14
AT&T SIM Card Registration.....	1-14
T-Mobile SIM Card Registration.....	1-16
StrideLinX Router Connectivity Requirements for Local IT	1-17
How does the StrideLinX router connect? (ports, protocols & servers)	1-17
How to grant the StrideLinX router access?	1-17
Servers & domains	1-18
Ports & protocols	1-18
MAC or IP Address Filtering.....	1-18
Agency Approvals	1-19

Chapter 2: StrideLinx Platform

Overview	2-4
Terms of Use	2-4
Data Fair Use Policy	2-4
Getting started	2-5
Create a User Account.....	2-5
Login.....	2-5
Choose Company.....	2-5
User Interface	2-6
Registering Your Device	2-6
Login.....	2-7
Generate a Configuration File.....	2-7
Register Your StrideLinx Router.....	2-11
Activate Your StrideLinx Router	2-12
Edit Router Info and Set Location	2-12
Save/Load Config Files for Router Transfer	2-13
Configure LAN as WiFi Access Point (Hotspot)	2-14
Configure Redundant WAN Access	2-15
Installing VPN Client Software	2-19
Download Installer	2-19
Run Setup	2-19
Run VPN Client	2-19
Confirm Windows TAP Ethernet Driver Installed	2-19
Reconnect to StrideLinx Platform	2-19
Support.....	2-19
Connect to Your Router by VPN	2-20
Regarding VPN Connections	2-20
Device Status.....	2-21
Connect to Devices Behind the StrideLinx Router	2-22
HTTP/VNC/Data Logging Services and Shortcuts	2-22
Using StrideLinx on Your Mobile Device	2-25
iOS Client.....	2-25
Android Client.....	2-26
Access via Web.....	2-26

Reducing Router Bandwidth 2-27

Organization: Companies, Device Categories & User Groups..... 2-28

 Overview..... 2-28

 Companies..... 2-28

 Device Categories..... 2-28

 User Groups 2-30

Access and Permissions 2-31

Two-factor Authentication 2-32

 Setting Up Two-factor Authentication 2-32

 Backup Codes 2-35

 Logging In 2-35

 Disabling Two-factor Authentication..... 2-36

 User Access Token 2-36

Transfer a Device 2-36

 To Assign a Device Key..... 2-37

Chapter 3: Controller Connection Examples

Video Examples..... 3-3

CLICK PLC Connection via Cellular Router SE-SL3011-4G 3-4

 Before You Begin..... 3-4

 Setup 3-4

BRX PLC Connection via WiFi Router SE-SL3011-WF 3-7

 Before You Begin..... 3-7

 Setup 3-7

C-more® HMI Connection via Wired Router SE-SL3011 3-10

 Before You Begin..... 3-10

 Setup 3-10

Chapter 4: Data Logging

Cloud Data Logging 4-3

 Why Cloud Data Logging? 4-3

 How Does the Cloud Data Logger Work?..... 4-3

 Configure Cloud Data Logging On Your Device..... 4-3

 Set Up Datalogging Subscription 4-4

 Set Up Data Sources for a Device Using Modbus Protocol..... 4-5

Table of Contents

Cloud Logging Web App	4-11
Dashboards	4-11
Download Logged Data	4-17
Status Info	4-18
Tag Configuration	4-19
Trigger Configuration	4-21
Test Utility	4-23
Pausing, Deactivating, & Terminating Your Datalogging Subscription	4-24
Activate / Deactivate Datalogging	4-24
Pause / Resume Datalogging.....	4-24
Terminating a Subscription.....	4-24

Chapter 5: Cloud Notify

Cloud Notify	5-3
Why Cloud Notify?.....	5-3
How Does the Cloud Notify License Work?	5-3
Configure Cloud Notify On Your Device.....	5-3
Set Up Cloud Notify License.....	5-4
Set Up Data Sources For Alarm Notifications	5-5
Router Conditions for Alarm Notifications	5-10
Formatting the Alarm Notification Email	5-11
Cloud Notify Web App	5-12
Main Screen	5-12
Adding Alarms.....	5-13
Export Alarm Configurations	5-14
Managing Alarm Recipients.....	5-15
What Happens When an Alarm is Triggered?.....	5-16
Message Center.....	5-17
Configuring Your Mobile Device to Receive Push Notifications.....	5-19

Appendix A: Accessories & Add-on Subscriptions

Antennas	A-3
4G LTE Antennas (for P/N SE-SL3011-4G and SE-SL3011-4GG).....	A-3
WiFi Antennas, IEEE 802.11 b/g/n 2.4 GHz (for P/N SE-SL3011-WF)	A-4
Add-on Subscriptions & Licenses	A-5

Service Level Agreement	A-6
Cloud Logging	A-6
Cloud Notify	A-7
Data Top-up	A-7
Premium Branding	A-7

Appendix B: Troubleshooting

Troubleshooting Overview	B-3
My StrideLinx Router Doesn't Come Online	B-3
Internet Connection	B-3
Connectivity	B-3
Network Settings.....	B-3
Configuration.....	B-3
StrideLinx Router Log File.....	B-5
I Can't Connect to the StrideLinx Router	B-5
VPN Client	B-5
TAP Adapter	B-5
VPN Client Log File	B-6
I Can't Connect to My Device(s) Behind the StrideLinx Router.....	B-6
VPN Connection.....	B-6
IP Range.....	B-6
Default Gateway.....	B-6
Timeout Setting	B-6
Programming Software Does Not Allow Multiple Programming Connections	B-6
I Don't Know How to Configure My Device	B-6
I Am Unable to Configure My Device.....	B-7
Check Your Settings	B-7
I Still Can't Connect to My Device	B-7
I Can't Connect to My HTTP/VNC Server.....	B-7
Accessibility	B-7
HTTP/VNC Server.....	B-7
Password	B-7
StrideLinx Router Settings	B-7
Specific Service and Server Settings.....	B-8
Wireless Connectivity	B-8

Table of Contents

Appendix C: Safety and Security Considerations

Security Considerations for Control Systems Networks.....	C-3
Safety Guidelines.....	C-4
Plan for Safety	C-4
Digital Input Safety Lockout	C-5

Appendix D: Data Logging Address Notation – AutomationDirect Devices

StrideLinx Modbus to AutomationDirect PLC Address Maps	D-3
CLICK PLCs	D-3
DirectLogic PLCs	D-6
Do-more PLCs	D-8
Productivity Series PLCs.....	D-10

Appendix E: StrideLinx Network Security

Introduction: Intended Audience.....	E-3
Solution explained.....	E-3
StrideLinx Router.....	E-3
StrideLinx Platform.....	E-3
StrideLinx Client.....	E-3
Overview.....	E-3
Controls Network Security	E-5
Remote access.....	E-5
Local access.....	E-5
Company Network Security	E-6
Connectivity.....	E-6
Remote access.....	E-7
Local access.....	E-7
StrideLinx Platform Security.....	E-7
Servers	E-7
StrideLinx platform.....	E-7
VPN Client Security	E-8

Appendix F: Capabilities of Connected AutomationDirect Devices

Network Topology.....	F-3
Network with StrideLinx VPN router using wired or WiFi network connectivity	F-4

Network with StrideLinX VPN router using 4G cellular network connectivity F-5

Device Capabilities..... F-6

Appendix G: Set Up Data Source Using Siemens S7 protocol

Set up data source for a device using Siemens S7 protocol G-3

Appendix H: Set Up Data Source Using OPC UA protocol

Set up data source for a device using OPC UA protocol H-3

Appendix I: Set Up Data Source Using EtherNet/IP protocol

Set up data source for a device using EtherNet/IP protocol I-3

Error Messages I-13

Appendix J: Set Up Data Source Using BACnet/IP protocol

Set up data source for a device using BACnet/IP protocol..... J-3

Appendix K: Set Up Data Source Using MELSEC protocol

Set up data source for a device using MELSEC protocol K-3

PLC settings K-4

Select a communication protocol..... K-9

Add variables (new, import) K-11

Manually add new variables K-11

Import variables from a file (or device)..... K-12

Test variables K-13

Connecting StrideLinX to Q series Ethernet module QJ71E71-100 with MELSEC Protocol..... K-14

Appendix L: Custom Branding

Custom branding.....L-3

Basic brandingL-3

Premium brandingL-6

Appendix M: Terms of Use

IXON B.V. Terms of Use..... M-3

Annex I M-11