

# STELLAR™ SR44 SOFT STARTER USER MANUAL TABLE OF CONTENTS

---



Chapter 1: Mechanical Installation . . . . .	1-1
Manual Overview . . . . .	1-2
1 – Mechanical Installation . . . . .	1-3
Chapter 2: Electrical Installation . . . . .	2-1
2.1 – Warnings & Agency Approvals . . . . .	2-2
2.2 – Electrical Connections - Specifications . . . . .	2-3
2.3 – Standard Wiring Configurations . . . . .	2-4
2.4 – Motor Control Circuits . . . . .	2-6
2.5 – Electrical Connections - Terminal Locations . . . . .	2-9
2.6 – Power Supply Connections . . . . .	2-12
2.7 – Control Card Connections . . . . .	2-13
2.8 – (Reserved for Future Use) . . . . .	2-13
2.9 – Typical Motor Power at Rated Voltage . . . . .	2-14
2.10 – Fuse and Current Ratings . . . . .	2-15
Chapter 3: Applications . . . . .	3-1
3.1 – Motor Suitability and Associated Considerations . . . . .	3-2
3.2 – Rules for Specific Applications . . . . .	3-5
3.3 – Concepts and Principles of Fixed-Speed Induction Motor Starting and Control . . . . .	3-8
3.4 – Principles of the Optimizing Mode . . . . .	3-15
3.5 – Chapter 3 Glossary of Terms . . . . .	3-20
3.6 – Power Factor Conversion Chart . . . . .	3-21

Chapter 4: Electromagnetic Compatibility . . . . .	4-1
4.0 – Electromagnetic Compatibility (EMC) . . . . .	4-2
4.1 – Introduction . . . . .	4-2
4.2 – Applicable Standard Within the EU . . . . .	4-2
4.3 – Mandatory Requirements Within the EU . . . . .	4-2
4.4 – Guidance for Installation Personnel and System Designers . . . . .	4-2
4.5 – EMC Basic Criteria . . . . .	4-3
4.6 – Purchasing Implications of Meeting an EMC Standard . . . . .	4-3
4.7 – Basic EMC Considerations . . . . .	4-4
Chapter 5: Keypad Menu Items and Parameters . . . . .	5-1
5.0 – How to Use This Chapter . . . . .	5-2
5.1 – Configuring the SR44 Soft Starter . . . . .	5-3
5.2 – Keypad Menu Structure . . . . .	5-8
5.3 – Parameter Basic Information . . . . .	5-15
5.4 – Menu Settings and Parameter Descriptions . . . . .	5-23
5.5 – Definitions for Chapter 5 . . . . .	5-79
Chapter 6: Serial Communications . . . . .	6-1
6.1 – Overview . . . . .	6-2
6.2 – Quick Start . . . . .	6-2
6.3 – Specifications . . . . .	6-3
6.4 – Parameter Memory Addresses . . . . .	6-4
6.5 – Serial Communication to SR44 . . . . .	6-13
6.7 – Example PLC Communications Programs . . . . .	6-19
Chapter 7: Optional Hardware . . . . .	7-1
7.1 – SR44-RS485 Communication Card . . . . .	7-2
7.2 – SR44-KPD Remote Keypad . . . . .	7-4
Appendix A: Setup Examples . . . . .	A-1
A.1 – Setup Examples . . . . .	A-2
A.2 – Advanced Setup Examples . . . . .	A-19
Appendix B: Applications Data . . . . .	B-1
SR44 Applications Data . . . . .	B-2

---

Appendix C: Technical Hints . . . . .	C-1
Technical Hints . . . . .	C-2
Appendix D: Using AutomationDirect PLCs with SR44 Soft Starters . . . . .	D-1
Compatibility Overview . . . . .	D-2
CLICK PLC I/O Compatible with SR44 Soft Starters . . . . .	D-2
DL05/DL06 PLC I/O Compatible with SR44 Soft Starters . . . . .	D-3
DL105 PLC I/O Compatible with SR44 Soft Starters . . . . .	D-4
DL205 PLC I/O Compatible with SR44 Soft Starters . . . . .	D-4
DL305 PLC I/O Compatible with SR44 Soft Starters . . . . .	D-5
DL405 PLC I/O Compatible with SR44 Soft Starters . . . . .	D-6
P3000 PLC I/O Compatible with SR44 Soft Starters . . . . .	D-6
Terminator I/O Compatible with SR44 Soft Starters . . . . .	D-7

BLANK  
PAGE