




Installation instructions
Progressive ring fitting

CF08-25N

CF08-50N


80284300 / 00 04 / 2019

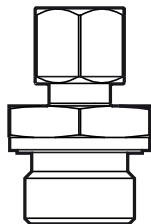


by Automationdirect.com


The progressive ring fitting consists of the four parts screw fitting (1), first clamping ring (2), second clamping ring (3) and coupling nut (4).


- ▶ Insert the screw fitting (1) in the process connection and tighten. Use a thread sealer that is compatible with the media if required by the application.
- ▶ Mount the first clamping ring (2). The tapered end must face towards the cone.
- ▶ Mount the second clamping ring (3).
- ▶ Fit the coupling nut (4).

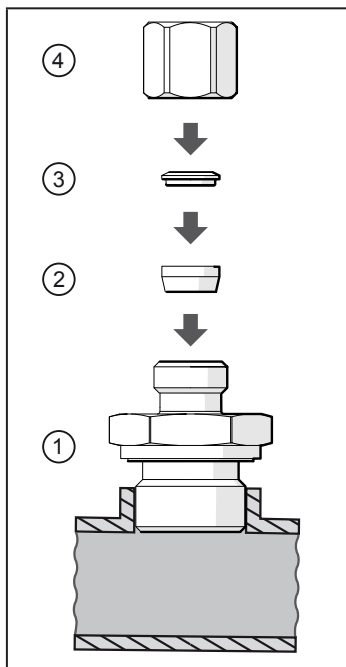

- ▶ Insert the sensor.
- ▶ Hand tighten the coupling nut (5) and mark its position with a line (6).
- ▶ Adjust the sensor to the required installation depth. Hold it and tighten the coupling nut by 1 ¼ turns with a tool (7).

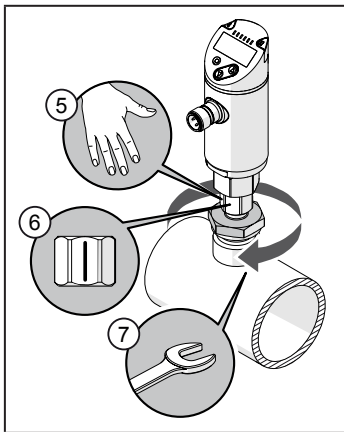

 The first clamping ring (2) and second clamping ring (3) are now firmly connected to the sensor probe. **The installation depth can no longer be changed.**

-  ▶ Recommended installation depth for the measuring probe: middle of the pipe.
- ▶ Refer to the sensor operating instructions for specific probe mounting requirements.

Repeated installation

You can remove the sensor e.g. to clean the tip.

- ▶ After that, reinsert the sensor and tighten the coupling nut without applying too much force.