


Output Specifications	
<b>Output Channels</b>	4
<b>Output Range</b>	4–20 mA
<b>Signal Resolution</b>	12-bit
<b>Resolution Value of LSB (least significant bit)</b>	4–20 mA = 3.9 $\mu$ A / count 1 LSB = 1 count
<b>Data Range</b>	0–4095 counts
<b>Output Type</b>	Current sourcing at 20mA max
<b>Output Value in Fault Mode</b>	Less than 4mA
<b>Load Impedance</b>	0–570 $\Omega$ (19.2 VDC), 0–690 $\Omega$ (21.6 VDC), 0–810 $\Omega$ (24.0 VDC), 0–930 $\Omega$ (26.4 VDC), 0–1100 $\Omega$ (30.0 VDC) Minimum Load: 0 $\Omega$ @ 0–45 °C 125 $\Omega$ @ 45–60 °C ambient temperature
<b>Maximum Inductive Load</b>	1mH
<b>Allowed Load Type</b>	Grounded
<b>Maximum Inaccuracy</b>	1% of range
<b>Full Scale Calibration Error</b>	$\pm$ 0.2% of range minimum
<b>Offset Calibration Error</b>	$\pm$ 0.2% of range maximum
<b>Accuracy vs. Temperature</b>	$\pm$ 75 PPM / °C maximum full-scale calibration change ( $\pm$ 0.005% of range / °C)
<b>Max Crosstalk at DC, 50Hz and 60Hz</b>	-72dB, 1 LSB
<b>Linearity Error (End to End)</b>	$\pm$ 4 counts max., ( $\pm$ 0.1% of full scale)
<b>Output Stability and Repeatability</b>	$\pm$ 2% counts after 10 min. warm up (typical)
<b>Output Ripple</b>	$\pm$ 0.2% of full scale
<b>Output Settling Time</b>	0.3 ms max., 5 $\mu$ min. (full scale range)
<b>All Channel Update Rate</b>	2ms (max)
<b>Maximum Continuous Overload</b>	Outputs open circuit protected
<b>Type of Output Protection</b>	Electronically current limited to 20mA or less
<b>Output Signal at Power Up and Power Down</b>	4mA
<b>External Power Supply Required</b>	24VDC (-20% / +25%) @ 140mA (Loop Power Included)

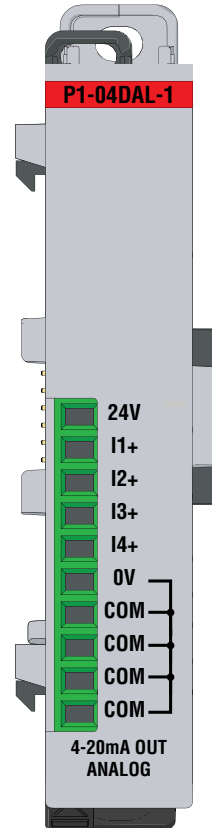

## P1-04DAL-1 Analog Output

The P1-04DAL-1 Low Resolution Analog Output Module provides four current sourcing channels for converting a digital value of 0–4095 (12-bit) to 4–20 mA analog signals for use with the Productivity1000 system.

Output Specifications	1
General Specifications	2
Terminal Block Specifications	2
Wiring Diagram and Schematic	3
Module Installation Procedure	4
QR Code	4
Wiring Options	5
Module Configuration	5
Linear Scaling	6
Non-Linear Scaling	6
Typical Application Example	7
Warning	8

**Terminal Block sold separately, (see wiring options on page 5).**

Warranty: Thirty-day money-back guarantee. Two-year limited replacement. (See [www.productivity1000.com](http://www.productivity1000.com) for details).


General Specifications	
<b>Operating Temperature</b>	0° to 60°C (32° to 140°F)
<b>Storage Temperature</b>	-20° to 70°C (-4° to 158°F)
<b>Humidity</b>	5 to 95% (non-condensing)
<b>Altitude</b>	2,000 meters max
<b>Pollution Degree</b>	2
<b>Environmental Air</b>	No corrosive gases permitted
<b>Vibration</b>	IEC60068-2-6 (Test Fc)
<b>Shock</b>	IEC60068-2-27 (Test Ea)
<b>Overvoltage Category</b>	II
<b>Field to Logic Side Isolation</b>	1800VAC applied for 1 second
<b>Insulation Resistance</b>	> 10MΩ @ 500VDC
<b>Heat Dissipation</b>	3000mW Maximum
<b>Enclosure Type</b>	Open Equipment
<b>Module Location</b>	Any I/O position in a Productivity1000 System
<b>Field Wiring</b>	Removable terminal block (sold separately). Use <b>ZIPLink</b> Wiring System optional See "Wiring Options" on page 5.
<b>EU Directive</b>	See the "EU Directive" topic in the Productivity Suite Help File. Information can also be obtained at: <a href="http://www.productivity1000.com">www.productivity1000.com</a>
<b>Terminal Type (sold separately)</b>	10-position Removable Terminal Block
<b>Weight</b>	85.1 g (2.2 oz)
<b>Agency Approvals</b>	UL 61010-1 and UL 61010-2-201 File E139594, Canada and USA CE (EN 61131-2 EMC, EN 61010-1 and EN 61010-2-201 Safety)*

\*See CE Declaration of Conformance for details.

Terminal Block Specifications		
Part Number	P1-10RTB	P1-10RTB-1
<b>Positions</b>	10 Screw Terminals	10 Spring Clamp Terminals
<b>Wire Range</b>	30–16 AWG (0.051–1.31 mm <sup>2</sup> ) Solid / Stranded Conductor 3/64 in (1.2 mm) Insulation Max. 1/4 in (6–7 mm) Strip Length	28–16 AWG (0.081–1.31 mm <sup>2</sup> ) Solid / Stranded Conductor 3/64 in (1.2 mm) Insulation Max. 19/64 in (7–8 mm) Strip Length
<b>Conductors</b>	"USE COPPER CONDUCTORS, 75°C" or equivalent.	
<b>Screw Driver</b>	0.1 in (2.5 mm) Maximum*	
<b>Screw Size</b>	M2	N/A
<b>Screw Torque</b>	2.5 lb-in (0.28 N-m)	N/A


\*Recommended Screw Driver TW-SD-MSL-1

# P1-04DAL-1 Schematic

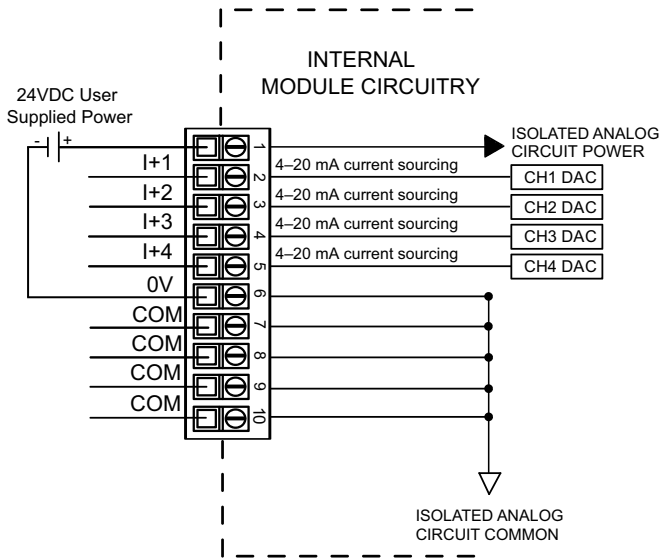

# P1-04DAL-1 Wiring Diagram

## Current Source Output Circuit

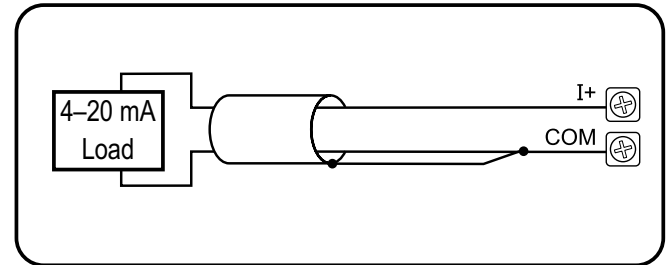


Note: Shield is connected to common at the source device.

# Module Installation

# QR Code


**WARNING:** Do not add or remove modules with field power applied.

**Step One:** With latch in "locked" position, align connectors on the side of each module and stack by pressing together. Click indicates lock is engaged.


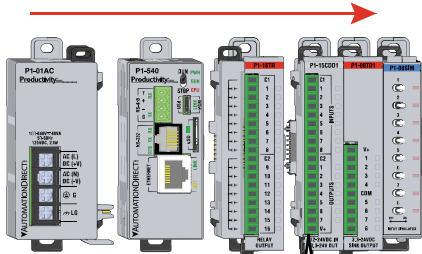


**Step Two:** Attach field wiring using the removable terminal block or ZIPLink wiring system.

Check all latches are secure after modules are connected.

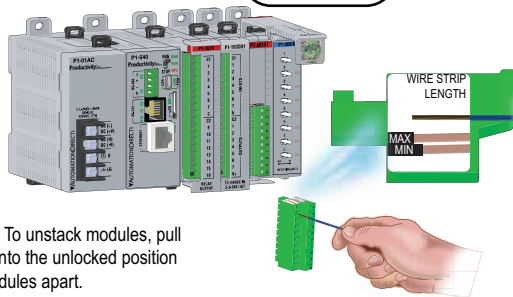

**Step Three:** To unstack modules, pull locking latch up into the unlocked position and then pull modules apart.

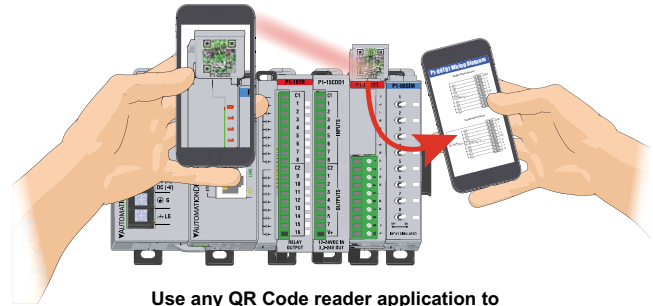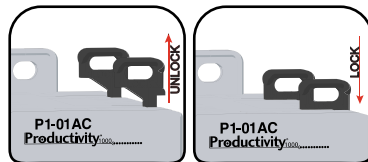


Use any QR Code reader application to display the module's product insert.

# Module Configuration

## Wiring Options

### 1 ZIPLink Feed Through Modules and Cables<sup>1</sup>

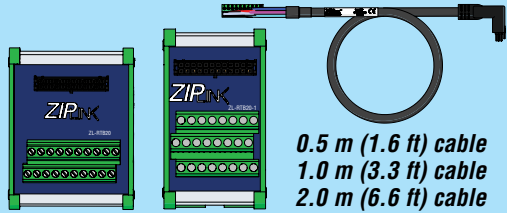


ZL-RTB20  
ZL-RTB20-1

ZL-P1-CBL10  
ZL-P1-CBL10-1  
ZL-P1-CBL10-2

0.5 m (1.6 ft) cable  
1.0 m (3.3 ft) cable  
2.0 m (6.6 ft) cable


### 2 Terminal Block with pigtail cable



ZL-P1-CBL10-1P  
ZL-P1-CBL10-2P


1.0 m (3.3 ft) cable  
2.0 m (6.6 ft) cable

### 3 Screw Terminal Block only



P1-10RTB  
(Quantity 1)

### 4 Spring Clamp Terminal Block only



P1-10RTB-1  
(Quantity 1)

### 5 Accessories<sup>2</sup>




ZL-RTB-COM

TW-SD-SL-1

TW-SD-MSL-1

1. Cable + ZIPLink Module = Complete System
2. ZL-RTB-COM provides a common connection point for power or ground

Using the Hardware Configuration tool in the Productivity Suite programming software, drag and drop the P1-04DAL-1 module into the configuration.  
If desired, assign a *User Tagname* to each output point channel selected and to each *Status Bit Item*.

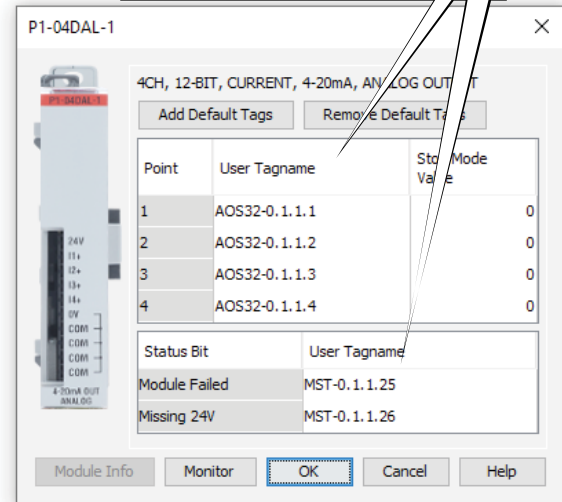

# Linear Scaling

The Scale (Linear) function can be used to:

- Convert an application specific range to range which is native to the analog output module.
- Make other linear conversions in ranges appropriate to the application.

**Scale (Linear) (SCL)**

Input: Motor Speed      Output: Motor Driver

In Min: 0      In Max: 600  
Out Min: 0      Out Max: 4095

Show Instruction Comment

Select the Input and Output tags appropriate for the application. Convert raw input signals to engineering units for use in the program, or convert engineering units to output signals for control purposes.

min      max

min      max

# Non-Linear Scaling

The Scale (Non-Linear) function can be used for Non-Linear applications.

**Scale (Non-Linear) (SCLN)**

Input: Level Transmitter      Output: Tank Level Display Gauge

Input value	Desired Output
0	0
1	0.5
2	1
3	1.55
4	2.25
5	3.07
6	4
6.5	5
7	7
0	0
0	0
0	0
0	0
0	0
0	0
0	0
0	0

Show Instruction Comment

Enter actual output values for each input value break point.

min      max

min      max



**WARNING:** To minimize the risk of potential safety problems, you should follow all applicable local and national codes that regulate the installation and operation of your equipment. These codes vary from area to area and it is your responsibility to determine which codes should be followed, and to verify that the equipment, installation, and operation are in compliance with the latest revision of these codes.

***Equipment damage or serious injury to personnel can result from the failure to follow all applicable codes and standards. We do not guarantee the products described in this publication are suitable for your particular application, nor do we assume any responsibility for your product design, installation, or operation.***

If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call Technical Support at 770-844-4200.

This publication is based on information that was available at the time it was printed. At AutomationDirect.com® we constantly strive to improve our products and services, so we reserve the right to make changes to the products and/or publications at any time without notice and without any obligation. This publication may also discuss features that may not be available in certain revisions of the product.

Document Name	Edition/Revision	Date
P1-04DAL-1-DS	2nd Edition, Rev A	9/14/2021

Copyright 2019, AutomationDirect.com Incorporated/All Rights Reserved Worldwide